

Packing instructions for PV modules

Safety note!



safety shoes



safety gloves



safety goggles


- 1 Use a grid box with the internal dimensions 1200x800x810 mm!



- 2 Line the bottom of the grid box with cardboard and sit a board that has at least module dimensions, to the rigid longitudinal side (without opening flap)!



- 3 Place the module in the grid box and sit them against the protective cardboard!

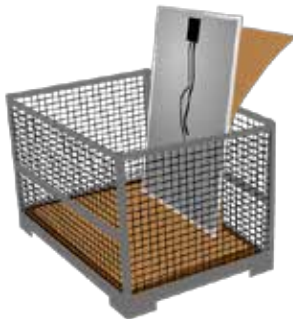


- 4 Fix it in place with tension belts / tapes along the grid of the long side, that it cannot slip. The module must be straight and must not protrude above the box.



- 5 Wrap the top of the module with clear wrap. Fix the cardboard to module.



- 6 Mark the opening of the box and make sure that no further goods can be uploaded!

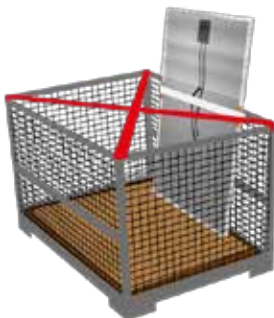

Congratulations!

Your grid box is now ready for shipping.